
Subject: Version 3 MEC Inputs Card B No sound
Posted by [Deadmeat](#) on Sun, 18 Dec 2005 17:54:29 GMT
[View Forum Message](#) <> [Reply to Message](#)

ks only when All
Tracks is selected in Step 7 above.

To DELETE time across multiple submixes use the DELETE TIME feature in the Edit menu

1. Find the Kick on the In and Out points and drop markers at both places.
 2. Open the Marker window. Use Reverse Sort* (making it easier to do the math in your head) and subtract to find the EXACT distance between the Markers.
 3. IMPORTANT! Locate the Now Line to the earlier of the 2 Markers.
That's where the cut
-